


For the best result, we recommend using headless nails to install the PET Felt shingles on the wall.



①


Prepare a wooden framework and make sure it's levelled. The distance between the horizontal slats depends on the desired overlap of shingles.

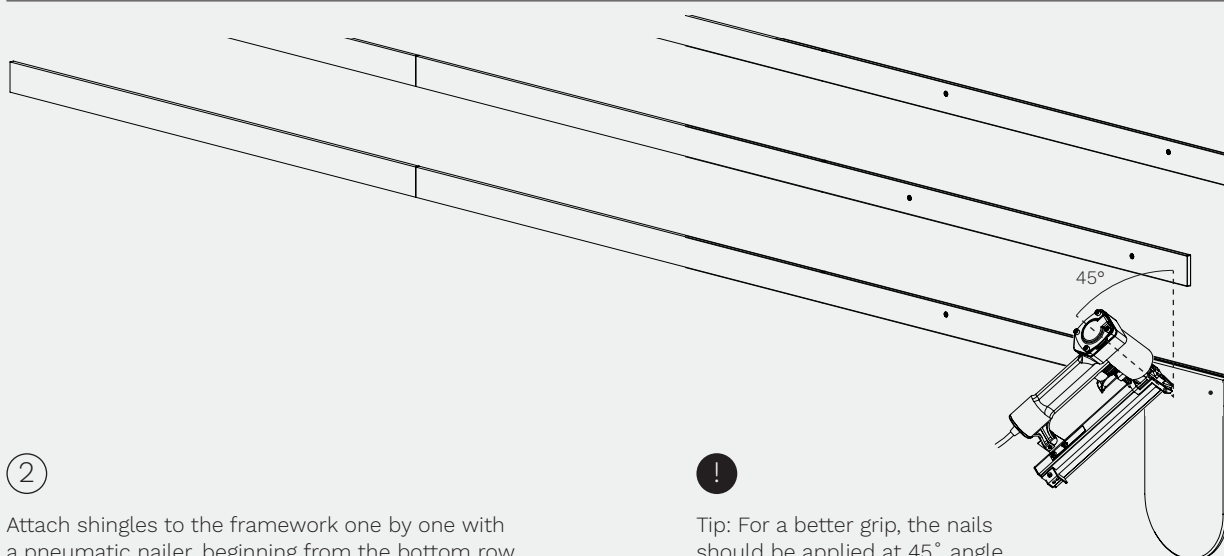

②

Attach shingles to the framework one by one with a pneumatic nailer, beginning from the bottom row.

Tip: For a better grip, the nails should be applied at 45° angle.

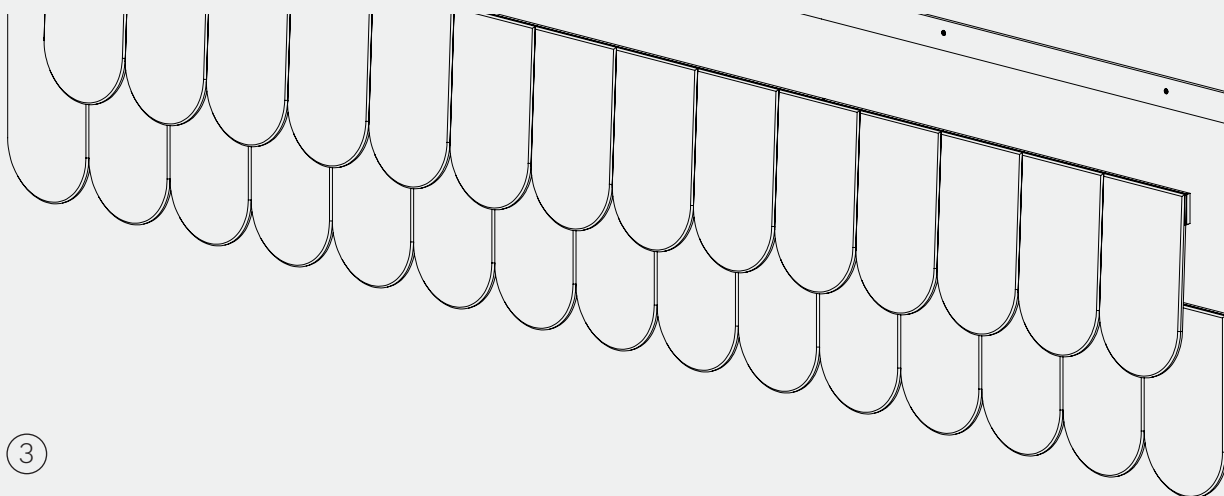

③

Continue working in rows, from bottom to the top, until the installation is complete.